

## Product specification




Model : POWUMX-5200

Prepared by : Claudia

### Features:

- Wide compatibility
- USB output (1A)
- Portable and convenient
- Electricity saving function
- User Friendly
- Rapid charge
- Residual power indicator LED when charging or discharging
- Comes with spare iPhone4/5/6 and micro USB cable
- Torch function capability
- Long cycle life of up to 500 cycles

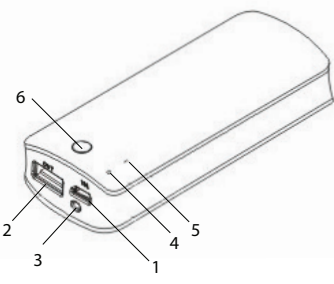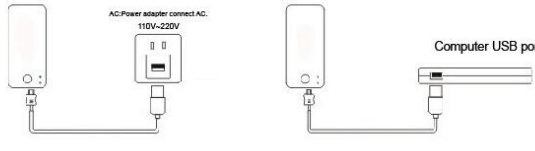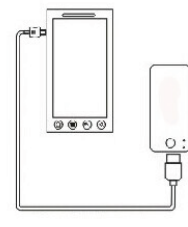

<p><b>ULTRAMAX®</b> User Manual</p> <p><b>POWER BANK</b> 5200 mAh</p>  <p>1- Input 2- Output 3- LED Torch 4- Blue LED Indicator 5- Red LED indicator 6- Power botton</p>	<p><b>ABOUT THIS USER MANUAL</b></p> <p>Thank you for purchasing this product. The ULTRA MAX POWER BANK is a light, compact and portable source of emergency power whenever you need it. It can charge a wide range of appliances such as mobile phones, MP3/4, IPOD, Bluetooth, games consoles, media players and some types of camera and camcorders. These instructions show you how to use the product. Please keep them in a safe place as they contain important safety advice.</p> <p><b>IMPORTANT SAFETY PRECAUTION</b></p> <p>1) When using the ULTRA MAX POWER BANK for the first time or after a long period of storage, the power may be low and it will need charging before use. It normally takes 2-3 full charges and discharges for the product to achieve optimal performance. 2) Please only use approved charging cables, adaptors and other accessories with this product otherwise your appliance may be damaged. 3) Do not expose the ULTRA MAX POWER BANK to extreme hot or cold temperatures as this will affect its performance. 4) Do not allow the ULTRA MAX POWER BANK to get wet. Keep it away from water, rain, creams and lotions etc. 5) Do not drop or shake the product. This may damage the internal components. 6) Please keep the product and accessories out of the reach of children. 7) When charging the ULTRA MAX POWER BANK, it will feel warm to the touch. This is quite normal.</p>	<p>8) In the interests of safety, keep the product away from fire and other sources of heat. 9) Do not allow any metal objects to come in contact with the input and output jacks as this will cause a short circuit and damage the product. 10) Any unauthorised repair or modification to the product may damage it and will invalidate the warranty. 11) Unauthorised use of power banks, mobile phones and products can cause interference with electronic equipment. Please obey all laws, instructions and guidance regarding the use of such products eg on board aircraft or near medical equipment.</p> <p><b>PRODUCT OVERVIEW</b></p> <p>1) Power Input : Micro USB for mobile power/charging 2) Power Output Interface: Type A USB interface output to other devices</p> <p><b>CHARGING INSTRUCTION</b></p> <p>RED LED flashing indicator: charging BLUE LED indicator on: discharging BLUE LED indicator off: fully discharged</p> 	 <p>1) Use the supplied cable to charge your Power Bank. This product can be charged from a mains outlet using a USB mains adaptor or a computer USB outlet. 2) On initial use or after long term storage, please first charge the product fully. Charging time is approximately 6 hours. When fully charged, the product will cut off automatically and the blue light will go out.</p> <p><b>LED TORCH OPERATION</b></p> <p>Push the start button twice rapidly to switch ON/OFF the LED Torch.</p> <p><b>COMMON ISSUES</b></p> <p>1) Device not charging: a- ensure your micro USB is connected to the power bank and the USB is connected to the power supply / computer. b- check your cable. It could be damaged. c- check your charger. It could be damaged.</p> <p>1) Device not discharging (charging other devices): a- your power bank needs to be charged. b- check your connections. c- your cable is damaged.</p> <p>Ultra Max Batteries, London, N18 2NG <span style="float: right;">V1K15</span></p>
---	--	--	---